
## To install your own DSL modem:

## **Connect Your DSL modem**

## Refer to your modem user guide or follow the below steps:

- 1. Install DSL filters on all telephony devices in your home. (This includes phones, fax machines, satellite receivers and security systems.)
- 2. Connect the power supply to the DSL modem and plug it in.
- 3. Connect the phone cord to the DSL modem and plug into the phone wall jack. (There should be no surge suppressors or DSL filters on this line.)
- 4. Connect the network cable to the DSL modem and then into the Ethernet port on your computer.
- 5. Turn the power on and wait for approximately one minute.
- 6. The DSL/ADSL/SYNC light should now be solid on.
- 7. Contact us if you have any question.

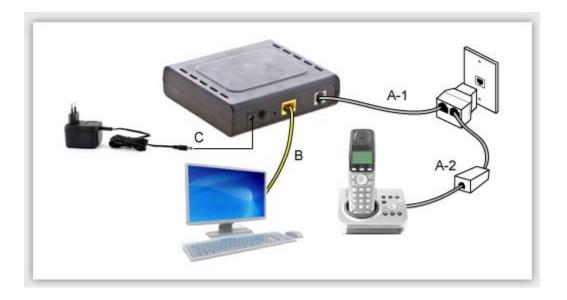

## **Setup Your Internet Connection**

Before setup your Internet Connection, it is recommended you have the modem user guide on hand and well known about your modem setting page.

(see below as an example)

Interface       Ouick State       Interface Setup       Advanced Setup       Access Management       Maintenance       Status       Hell         AtM VC       Virus Circut       Virus Cirut       Virus Circut	<b>TP-LIN</b>	<°	Click &	300Mbps Wireless N ADSL2+ Modem Route
ATM VC       Click         Virtual Circut       Virtual Circut         Status       Checktored         Virtual Circut       Virtual Circut         Status       Checktored         Virtual Circut       Virtual Circut         Status       Checktored         Virtual Circut       Construction         Virtual Circut       Virtual Circut         Consection       Servicenare         PPPOE.PPPOA       Servicenare         Servicenare       WirteLink DSL         Username       Circut         Bridge Inter face:       Checktored         Connection       PPPoE EPPoE Lic         Bridge Inter face:       Checktored	Interface	Start	Setup	Setup Management Maintenance Status Hei
ISP: C Dynamic P Address       C Static P Address       This is the User ID & Password World-Link DSL         PPPOE.PPPOA       Bridge Mode       Percent Pool       Password World-Link have sent to you.         PPPOE.ppPoA       Servicename: World-Link DSL       Enter User ID from World-Link have sent to you.         Viername:       Connection Setting       Connection: C Advays On (Recommended)       Enter Password from World-Link Encapsulation: PPPOE LLC ▼         IP Address       Get P Address:       C Static C Static C Dynamic Static P Address:       C Static C Dynamic Static P Address:         IP Address       Get P Address:       C Static C Dynamic Static P Address:       C Static C Dynamic Static P Address:         Default Route:       C Static C MIU Option: TCP MISS(default 1400) [140]       bytes C Enter 1442         Dynamic Route:       C Yes C No       TCP MIU Option: TCP MIU Option: TCP MIU (default 1480) [142]       bytes C Enter 1442			Status : VPI : VCI : ATM QoS : PCR : SCR :	Constructed C Deactivated     Constructed     (range: 0~255)     Societaria (range: 1~65535)      Enter 35     UBR     Construction     Cells/second     Cells/second
Servicename :       World-Link DSL         Username :       Servicename :         Password :       Servicename :         Bridge Interface :       Cachivated         Connection Setting       Connection :         IP Address       Connection :         Get IP Address :       Static @ Dynamic         Static IP Address :       Static @ Dynamic         NAT :       Enable IP         Default Route :       Static @ Dynamic         Muticast :       IP2-B :			ISP :	C Static IP Address C PPPoA/PPPoE C Pick PPPoA/PPPoE This is the User ID & Password World-Link
Connection : © Atways On (Recommended) Connect On-Demand (Close if idle for minutes) Connect Manualy TCP MSS Option : TCP MSS(default:1400)[400 bytes IP Address Get IP Address : O Static © Dynamic Static IP Address : 0000 IP Subnet Mask : 0000 Gateway : 0000 NAT : Enable Default Route : © Yes C No TCP MTU Option : TCP MTU(default:1480)[442 bytes © Enter 1442 Dynamic Route : RP2-B Direction : Both Multicast : Disabled Multicast : Disabled			Username : Password : Encapsulation :	Enter User ID from World-Link
Get P Address : C Stotic © Dynamic Static P Address : 0000 P Subnet Mask : 0000 Gatewray : 0000 NAT : Enable ♥ Default Route : © Yes C No TCP MTU Option : TCP MTU(default:1480)[1442 bytes \$ Enter 1442 Dynamic Route : RP2-B ♥ Direction : Both ♥ Multicast : Disabled ♥		тс		C Connect On-Demand (Close if idle for minutes)
4 Click	IP Address	Sta I T	tic IP Address : P Subnet Mask : Gateway : NAT : Default Route : CP MTU Option : Dynamic Route :	:: 0.0.0.0 :: 0.0.0.0 :: Enable ▼ :: © Yes C No :: TCP MTU(default:1480) 1442 bytes ← Enter 1442 :: RP2-B ▼ Direction : Both ▼

- 1. Refer to the modem user guide, open a Web browser and enter the modem IP address in the address bar. Go into the modem setup page.
- 2. Find and change the following parameters:
  - VPI: **0**
  - VCI: **35**
  - MTU: 1442

- Internet Login: **User ID** and **Password** provided by World-Link.
- 3. Re-boot your modem and computer, wait until the internet light on, then go surf.
- 4. Contact us if you have any question.